Creative Woof

Quick Start Guide

Model No.: MF8210

Micro Wireless Speaker

Overview



Bottom



Top



Front



Back

1. **Power ON/OFF**
2. **Multifunction Button (For *Bluetooth* Pairing / Connecting / Answering calls)**
   - In *Bluetooth*® mode, press and hold for 3 seconds to disconnect *Bluetooth*®.
   - In *Bluetooth*® mode, press the Multifunction button to answer the call, press and hold for 3 seconds to reject an incoming call.

   Status Indication LED : Blue LED for Status Indication and Red LED for Low Battery Indication

Status Indication	Status
Blinking Blue LED	Pairing mode, waiting for device to connect
Solid Blue LED	Connected to Bluetooth device or Aux-in device
Blinking Red LED	Low Battery

3. **Previous track button**: In *Bluetooth*® mode, press the button for previous track, press and hold for decreasing volume. **Note**: The button is invalid in the Aux-in mode.
4. **Play/Pause button**: In *Bluetooth*® mode, press the button to Play/Pause music. **Note**: The button is invalid in the Aux-in mode.
5. **Next track**: In *Bluetooth*® mode, press the button for next track, press and hold for increasing volume. **Note**: The button is invalid in the Aux-in mode.
6. **Microphone**
7. **Battery Indication LED:** Solid Red LED appears when charging and disappears when fully charged.

Battery Indication	Status
Solid Red LED	Charging
Red LED disappears with USB power attached	Fully charged

8. **Micro USB port:** Connect DC 5V USB for charging the speaker. The adapter is not included. You can use your mobile phone USB charger or connect to the USB port of your PC/power bank to charge the speaker.
9. **3.5mm Aux-in (Line-in):** Connect the speaker to your PC, MP3/MP4 player, Tablet, Mobile and other playback devices with 3.5mm stereo audio cable and the speaker will disconnect the *Bluetooth*® automatically.

Pair It

How to connect your speaker with Stereo *Bluetooth*® devices?

Step 1: Ensure your speaker battery has sufficient power.

Step 2: Turn on your speaker and it will be in *Bluetooth* mode automatically and ready for connecting. The Status Indication LED starts blinking blue.

Step 3: Turn on the *Bluetooth*® of your mobile device, search the "Creative Woof" speaker and connect to it. Input the default password "0000"(four zero) if required.

Step 4: The status indication LED will become solid blue to indicate the speaker is connected with your device.

Step 5: Run the music player on your device, and enjoy the loud and clear sound from your speaker.

Your speaker supports connecting to one *Bluetooth*® playback device only. You need to disconnect the previous paired *Bluetooth*® device in order to allow a second *bluetooth* device to connect to your speaker.The operation steps will also be same as before.

How to connect your PC via *Bluetooth*® Connection?

1. For PC with built-in Bluetooth® function.

Step 1: Start your PC, search the *Bluetooth*® device by "Start—Setting—Control Panel".

Step 2: Start the *Bluetooth*® searching function of your PC, blue light flashes when searching the Audio-in devices.

Step 3: The status indication LED of the speaker will become solid blue to indicate the speaker is connected with your device.

Step 4: You can start playing music from your PC with your speaker.

2. For PC without the Bluetooth® function.

Please purchase the *Bluetooth*® adapter separately. After installing the driver of your *Bluetooth* adapter, turn on *Bluetooth*® from the "Control Panel" or the shortcut of your PC to establish *Bluetooth* connection with your speaker. The instructions are same as above.

Aux-in Connection

Step 1: Your speaker comes with a standard 3.5mm Aux-in jack for connecting with other non-*Bluetooth* audio devices such as mobile phones, MP3/MP4 players, tablet, PC, etc. Plug one end of the audio cable to the Aux-in jack of the speaker and the other end connect to Headphone Out/Audio Out of your device.

Step 2: Your speaker will disconnect the *Bluetooth*® connection and switch to Aux-in (Line in) connection as the Aux-in mode has higher priority.

Battery Charging

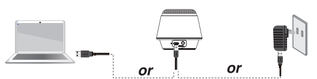

1. The speaker can be charged via PC USB port or USB adapter (Not included).
   Note: Please use qualified USB charger in order to avoid damage to the Lithium battery in the speaker.
2. **Status Indication**: It starts blinking red when the battery is low.
3. **Battery Indication**: It remains solid red when charging and disappears when fully charged.

Battery saving: The speaker automatically powers down when there is no *Bluetooth* connection or no connection on the Aux-in (Line-in) for more than 10 minutes.
* Power off when the speaker is expected to be unused for several days.

Troubleshooting

Problem	Solution
Speaker cannot turn on	• Make sure your speaker battery has sufficient power.
Paired *Bluetooth*® device cannot connect	• If your device requires a pass code, make sure to input "0000" four zero. • Restart your speaker. • Remove the "Creative Woof" from the pairing list on your device (Refer to the device owner's manual for assistance).Then pair the device with the speaker again.
Speaker indicated a connection, but no audio is played from the speaker	• Turn off or disable *Bluetooth*® on all other paired devices nearby and reconnect the device you desired • Restart your speaker.
Cannot pair the speaker with my *Bluetooth*® device	• Make sure your speaker is discoverable • Your device may be out of range, move your device closer to your speaker. • Make sure your device supports *Bluetooth* audio streaming • Restart your speaker.
No audio from a *Bluetooth*® device	• Make sure your speaker is not muted. • Make sure your *Bluetooth*® device is playing audio and not muted. • The status indication LED will become solid blue to indicate the speaker is connected with your device. • Restart your speaker.
Poor sound quality from a *Bluetooth*® device	• The status indication LED will become solid blue to indicate the speaker is connected with your device. • Move your device and/or your speaker from any device that generates electromagnetic interference, such as another *Bluetooth*® device, cordless phone, microwave oven or wireless router. • Try to turn off Wi-Fi to improve audio quality. • Check the quality of your music file. • Restart your speaker.
No Audio from Aux-in device	• Make sure your connected device is on and playing music. • Make sure you speaker is in Aux-in mode • Make sure the audio cable is correctly inserted • Increase the volume level on the device
Poor sound quality from Aux-in device	• Reduce the volume level on the Aux-in device • Make sure the 3.5mm audio cable is fully inserted into the speaker and the device. • Check the quality of your music file.

***Bluetooth*® compatibility note**: Creative Woof micro wireless speaker can be compatible with most of stereo *Bluetooth*® devices with the different brands and models, but some *Bluetooth*® devices may have compatibility problems with the speaker because they may not have required Bluetooth profile.

Specifications

Channel : 1.0 Channel
Size : L74 x W74x H65mm
Weight : 252g
***Bluetooth*® version** : *Bluetooth* 3.0
***Bluetooth*® profile** : A2DP, AVRCP, HSP, HFP
Working temperature : -10°C~50°C
DC input : DC 5V
Battery : Built-in 500mAh battery

Safety Information

Embedded Battery
• Do not attempt to remove the embedded battery.
The product must be disposed of according to local environmental regulations. To replace the battery, return your product to your regional support office. For product service information, go to **www.creative.com**.
• Do not expose to excessive heat such as sunlight fire or the like.

CAUTION: Risk of explosion if battery is replaced by incorrect types.

(Additional guidelines for wireless devices)
• The short wave radio frequency signals of a wireless device may impair the operation of other electronic and medical devices.
• Switch off the device where it is prohibited. Do not use the device in medical facilities, aircraft, refueling points, close to automatic doors, automatic fire alarms or other automatically controlled devices.
• Keep this device at least 20 cm from pacemakers and other medical devices. Radio waves may impair the operation of pacemakers and other medical devices.

Warnings and Cautions

1. To prevent fire or shock hazard, do not overload the electrical circuits
2. To prevent fire and shock hazard, do not plug or unplug the adapter with wet hands
3. Unplug the power cable if your device is smoking or abnormal and seek professional help from your nearest service center, do not service the device yourself.
4. To prevent fire and shock hazard, do not expose this product to rain or moisture. Liquids can cause a failure and/or a fire hazard.
5. The USB cable and audio cable cannot be twisted or stretched. This is to prevent a short circuit.
6. To prevent fire hazard, do not place the speaker near to any naked flame sources, such as lighted candles.

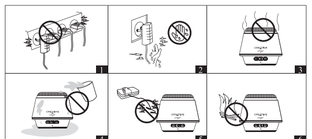

Notice for Singapore

Complies with
IDA Standards
DB00148

© 2014 Creative Technology Ltd. All rights reserved. Creative, the Creative logo and Creative Woof are trademarks or registered trademarks of Creative Technology Ltd in the United States and/or other countries. The *Bluetooth*® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such marks by Creative Technology Ltd is under license. All other trademarks are the property of their respective owners and are hereby recognized as such. All specifications are subject to change without notice. Actual contents may differ slightly from those pictured. Use of this product is subject to a limited warranty.